



Knowledgebase > AutoCal V2 > AutoCal V2 Hardware Configuration > Connecting AutoCal V2

## Connecting AutoCal V2

EFILive Support - 2020-08-28 - Comments (0) - AutoCal V2 Hardware Configuration

### Connecting AutoCal V2:



#### **WARNING**

**The RJ45 connection used on the OBDII cable (B) is the same as used on a standard computer network cable. Never connect the OBDII cable to your computer's network socket, or a network cable to your EFILive device. Damage will almost certainly occur to either your computer or EFILive device.**

#### Related Content

- [AutoCal V2 Hardware Specification](#)
- [Pin Assignments](#)