

Pass-Thru Flash & License a Controller


EFILive Support - 2021-09-06 - Comments (0) - V8 Scan and Tune Software

Follow these steps to license and flash the selected controller.


- 1. Open the **EFILive Scan and Tune** application.
- 2. Connect your FlashScan/AutoCal to your PC and your vehicle.
- Turn the vehicle ignition to the *On* position (not the *Accessory* position. Vehicle must not be cranked/running when flashing).
- 4. Select the **[F3: Tune]** option in the left-hand pane.
- 5. Click on the **Open** button at the bottom left of the screen.
- 6. Select the calibration file for the controller you wish to flash or license.
- 7. If tune file security has been applied to the tune file, review and accept the Security Warning.




8. Click on the **[F6: Cal Flash]** or **[F7: Full Flash]** options in the left-hand pane.

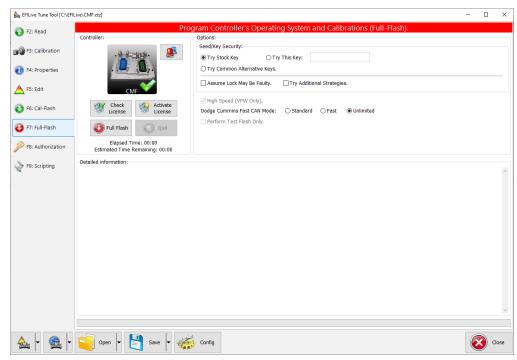


- 9. Confirm that the selected flash method is supported for the controller selected. This is denoted by a cross or a tick on the controller icon displayed.
- 10. Click on the **Check License** button. This will indicate if the controller is already licensed or needs to be licensed.

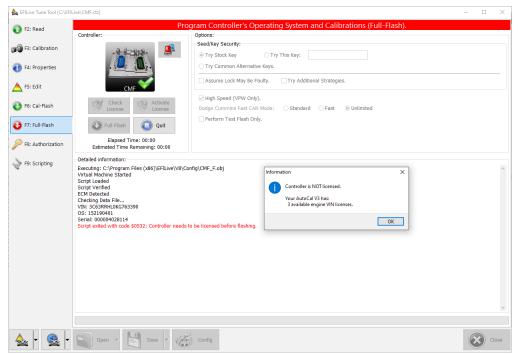

- 11. Where the controller is NOT licensed, select **Activate License** to license the controller.
- 12. Select **Yes** to license the controller or **No** to close this window.

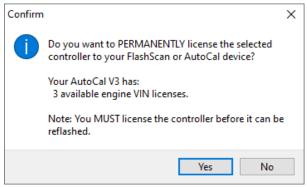

13. Select **Yes** to license the controller or **No** to close this window without licensing the controller.

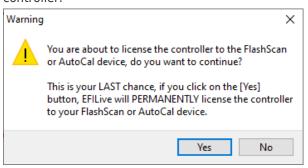

- 14. When the **Check License** process is complete a countdown timer will be shown for GM controllers. When prompted perform the following actions:
 - 1. Turn the vehicle ignition Off.
 - 2. Click on the Start button to begin the countdown timer.
 - 3. DO NOT turn the vehicle ignition on until the countdown timer expires. This time is critical to allow the ECM to perform internal functions after a read operation.



- 15. Select the **Cal Flash** or **Full Flash** button to commence the flash.
- 16. While the ECM is flashing an Elapsed time indicator, an Estimated Time Remaining indicator, and a Progress bar will display tracking the Flash progress.
- 17. When the flash process is complete a countdown timer will be shown. When prompted perform the following actions:
 - 1. Turn the vehicle ignition Off.
 - 2. Click on the Start button to begin the countdown timer.
 - 3. DO NOT turn the vehicle ignition on until the countdown timer expires. This time is critical to allow the ECM to perform internal functions after a read operation.



Related Content

- V3 Flash & License a Controller
- FlashScan V2 Flash & License a Controller
- AutoCal V2 Flash & License a Controller
- Problem Flashing a Controller

Comments (0)